




Freedom Wireless Instruction Sheet

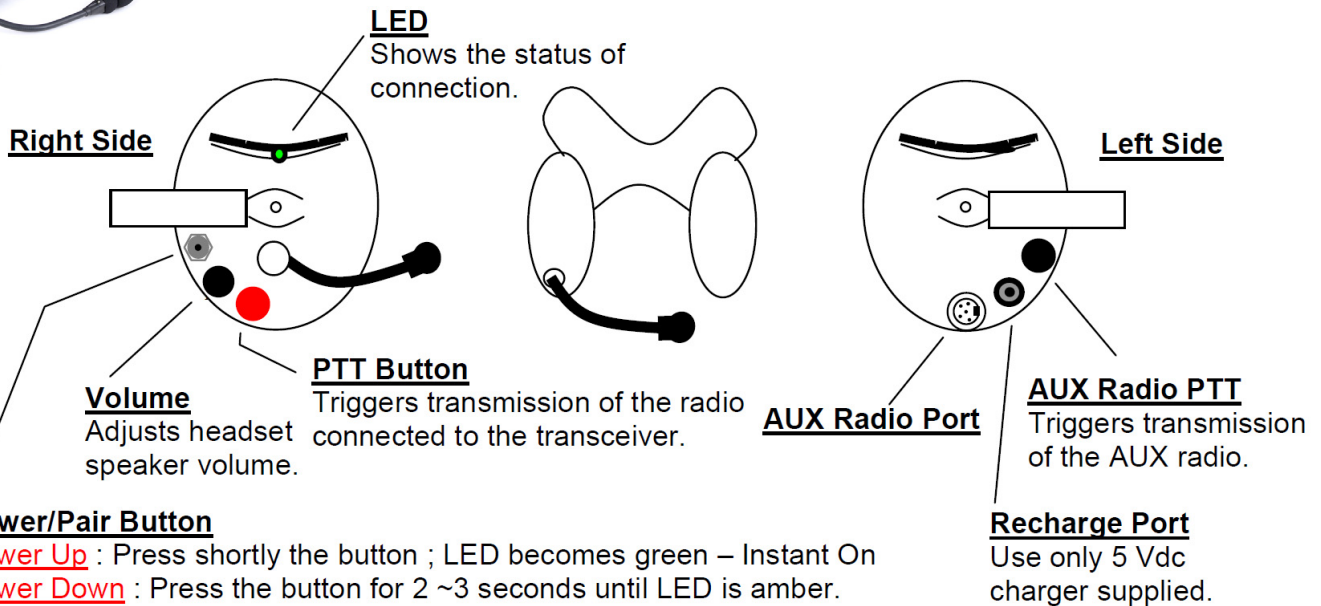

Note

1. How to check the battery level

By LED : Count the Amber blink at powering up.

3 blinks = over 80%, 2 blinks = 30 ~80%, and 1 blink = below 30%.

By sound : Count the “BEEP” sound at powering up.

3 beeps = over 80%, 2 beeps = 30 ~80%, and 1 beep = below 30%

2. Low Battery Warning

If you hear a “BEEP” every 1 min while the headset is active, the headset battery is low and needs to be charged (usually it takes 3 hours for full charge).

3. How to pair

(The new set is already paired and do not require pairing; Pairing is required only for a replacement unit.)

a. Initiate pairing at the transceiver (see the transceiver pairing instruction)

b. Make sure the headset power is off.

c. Press the Power/Pair button for 7 ~ 8 seconds until you hear “beep beep beep” or watch for the LED change from green to amber.

(Pairing and auto-connection takes about 45 ~ 50 seconds. Once the pairing is established, pairing is not required again.)

