


WS56 INSTRUCTION MANUAL

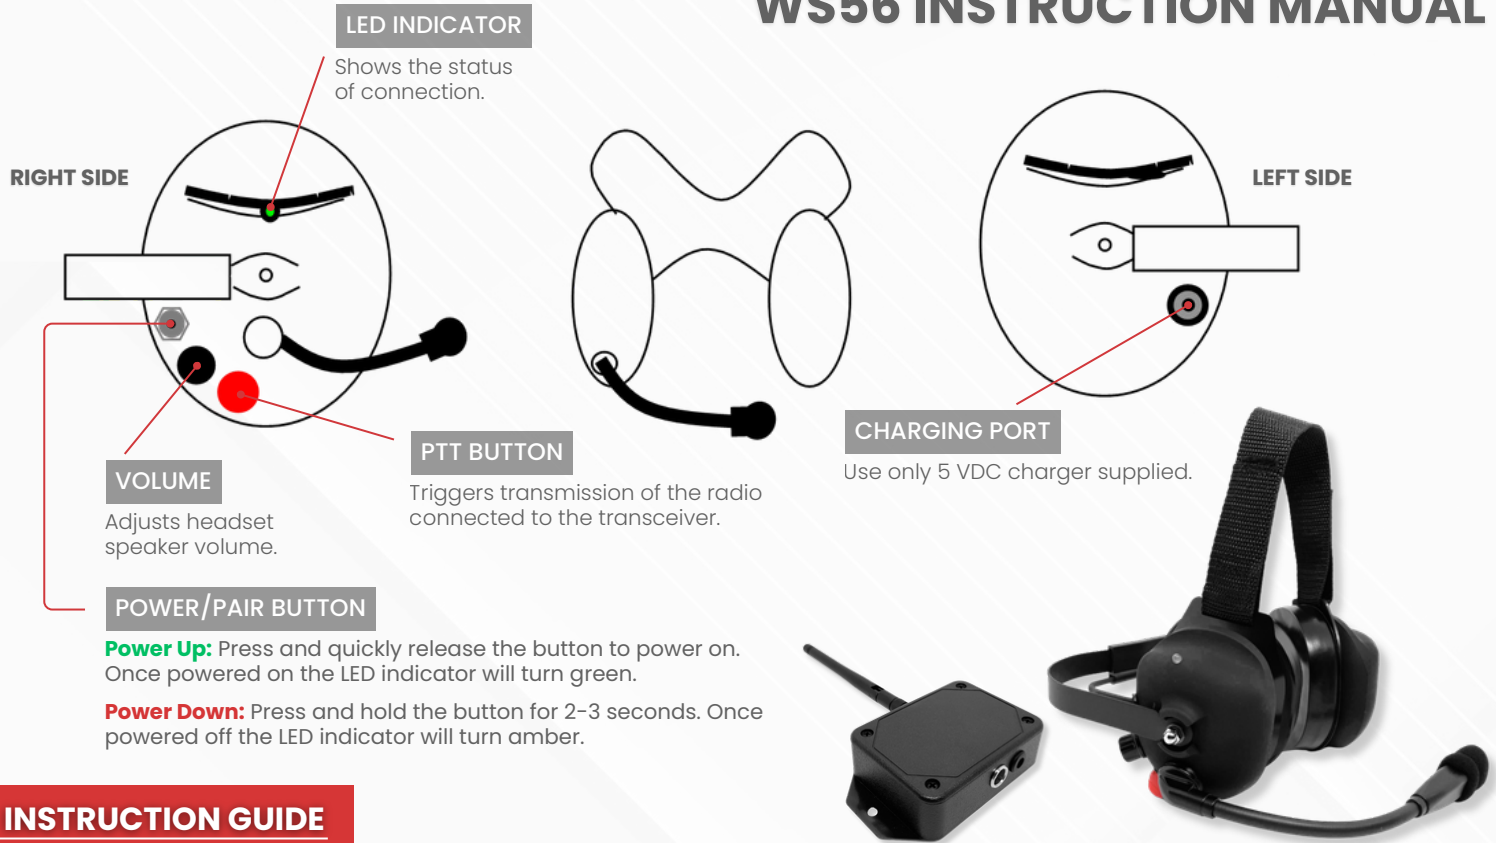

INSTRUCTION GUIDE

HOW TO CHECK THE BATTERY LEVEL

The battery level can be checked during power-up using either the LED indicator or the audible beep sequence.

Using the LED Indicator

- Count the number of amber LED flashes when the headset powers on.
 - 3 flashes:** Battery level above 80%
 - 2 flashes:** Battery level between 30%-80%
 - 1 flash:** Battery level below 30%

Using the Audible Indicator

- Count the number of beeps during power-up.
 - 3 beeps:** Battery level above 80%
 - 2 beeps:** Battery level between 30%-80%
 - 1 beep:** Battery level below 30%

LOW BATTERY WARNING

When the headset battery becomes low, it will emit a single beep approximately once every minute while the headset is powered on. Recharge the headset as soon as possible. A full charge typically requires 3-5 hours.

PAIRING INSTRUCTIONS

Note: New headsets are factory-paired and do not require pairing before use. The pairing procedure is only necessary when replacing a headset or establishing a new connection.

- Place the transceiver into pairing mode (refer to the Transceiver Pairing Instructions).
- Ensure the headset is powered off.
- Hold the Power/Pair button for 7-8 seconds until you hear three beeps **OR** the LED changes from green to amber.
- Wait approximately 45-50 seconds for pairing to complete automatically.

Once pairing is complete, the headset will reconnect automatically during future use unless it is replaced or reset.